

1000w PRO PRECISION DE KIT

ASSEMBLY INSTRUCTION **ALL-IN-ONE** SETUP


LUMATEK
PROFESSIONAL LIGHTING

www.lumatek-lighting.com


- 1.** Unboxing Remove reflector, ballast, ballast bracket and lamps from carton

- 2.** Initial Lamping
- a) Pick out desired lamp
 - b) Open up lamp holder lit
 - c) Place lamp inside lamp holders
 - d) Close lamp holder lit
- 

- 3.** Attach ballast bracket to ballast
- a) Line up ballast bracket with ballast
 - b) Fix ballast bracket onto ballast with large head M5 screw
- 

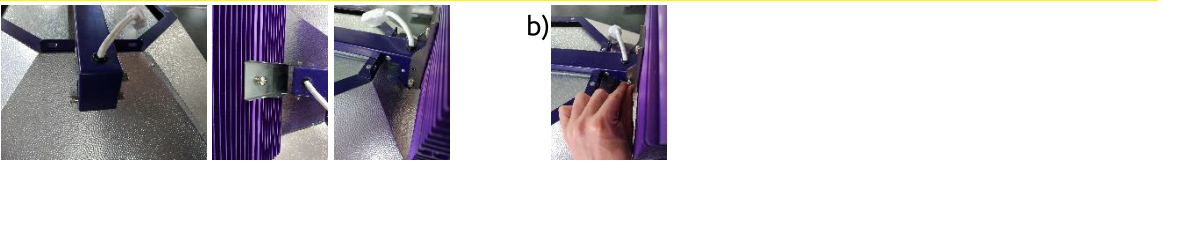- 4.** Merry ballast and reflector
- a) Slide ballast bracket onto the three screws on the side of the connection cable
 - b) Screw in small head M4 thumb screw into open hole
 - c) **Make sure thumb screw is securely fastened**
- 

- 5.** Apply hanging hooks
- a) Attach smaller hanging hook to the side without ballast
 - b) Attach larger hanging hook onto ballast
- 

- 6.** Connect ballast cord
- Plug ballast outgoing cord into reflector incoming cord
- 

1000w PRO PRECISION DE KIT

ASSEMBLY INSTRUCTION **REMOTE SETUP**


LUMATEK
PROFESSIONAL LIGHTING

www.lumatek-lighting.com

- 1.** Unboxing Remove reflector, ballast, ballast bracket and lamps from carton

- 2.** Initial Lamping

- a) Pick out desired lamp
- b) Open up lamp holder lid
- c) Place lamp inside lamp holders
- d) Close lamp holder lid

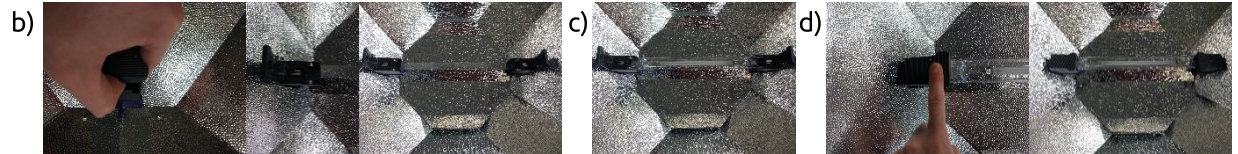

- 3.** Apply hanging hooks

Attach smaller hanging hooks on both sides of the reflector



- 4.** Connect ballast cord

- a) Plug ballast outgoing cord into extension cord
- b) Plug extension cord into reflector cord